



FSI-B Series Flow Sensor

Installation Guide

Introduction:

Creative Sensor Technologys impeller flow sensors provide accurate digital output signals proportional to the velocity of the liquid flowing through the mounting tee. The square wave digital signal is converted to flow rate by the receiving monitor or control device using calibration constants supplied by CST.


The sensor uses the same two wire path for power supply and signal output. The sensor circuit contains a pre-amplifier allowing the signal to travel up to 2,000 feet using shielded, twisted pair cable.



The flow sensor housing, held in place with a retaining nut, contains the detection circuitry and carries the unique four-bladed impeller on a transverse axle. The housing and mounting tee are custom made to form an integrated measurement chamber resulting in highly accurate, repeatable flow measurements through a wide range of velocities. The axle and impeller along with the sealing o-ring are replaceable in the field.

Mechanical Installation– Location and Orientation:

Because an impeller sensor measures the velocity of the liquid and converts it to a flow measurement based on area, proper flow measurement depends on the condition of the pipe interior and the sensor's location in the piping system. The pipeline must be full, free from trapped air, floating debris and built up sediment. The mounting tee should be installed with a minimum of 10 diameters of straight pipe (ex. 15 inches for 1 1/2 inch pipe), upstream and a minimum of 5 diameters of straight pipe (ex. 7 1/2 inches for 1 1/2 inch pipe) downstream to eliminate irregular flow profiles caused by valves, fittings or pipe bends.

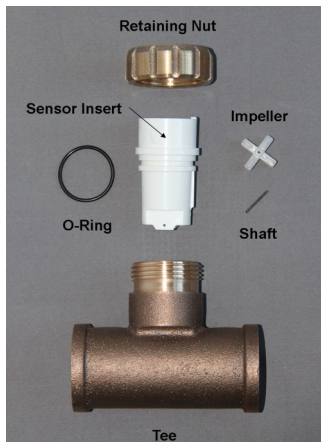

1. Flow sensors may be installed inside a building, outside above grade or underground. If installed above grade, consider security issues to prevent damage or disassembly. If installed below grade, do not direct bury, provide a meter pit or valve box for service. Always provide a service loop in the wire connections to allow the flow sensor insert to be brought above grade.
2. Always install the sensor with the arrow on the tee pointing in the direction of flow. Below grade the sensor is usually installed with the sensor housing up in the vertical or 12:00 O'clock position.

4. Flow sensors may be installed on horizontal or vertical sections of pipe providing that the piping remains full and does not contain trapped air. A vertical pipe with rising flow is preferred over falling flow. The sensor insert may be oriented in any direction radially around the pipe. The least favorable mounting position on a horizontal pipeline is straight down or the 6:00 O'clock position due to the chance of sediment fouling the impeller. Allow 3 3/4" of clearance over the sensor insert so it can be serviced.

Mechanical Installation– Installing sensor in pipe

1. The brass flow sensor mounting tee features female NPT threads for connection to metallic piping systems. Use a thread sealant and “best industry practices” to insure that the sensor is installed in the correct position with strong permanent joints.





Sensor Insert

2. Before joining the tee to the piping system disassemble the flow sensor to prevent damage. Remove the flow sensor insert from the tee by loosening the retaining nut, turning it counter-clockwise and pulling the housing straight out of the tee.

Do not pull on the wire leads!

3. Use threaded pipe nipples or cut and thread the existing pipe. Remove all chips, filings or cuttings from the pipe before installing the sensor tee. For copper pipe, use soldered male thread adapters.
4. Install the sensor tee with the arrow pointed in the direction of flow. Tighten both joints with a wrench leaving the area over the branch of the tee clear to install the sensor insert.
5. Make sure the insert and mounting tee are clean and free from dirt or debris before reassembly. Align the arrow on the top of the sensor insert with the downstream direction. This will align the guide key on the housing with the slot inside the tee. Push straight in so that the key enters the slot until the o-ring seals the opening. Reapply silicon grease to the o-ring if necessary. Slide the retaining nut over the wire leads and tighten by hand by turning clockwise.

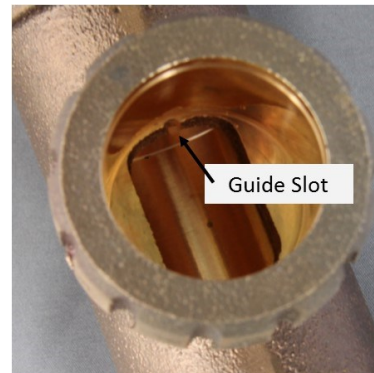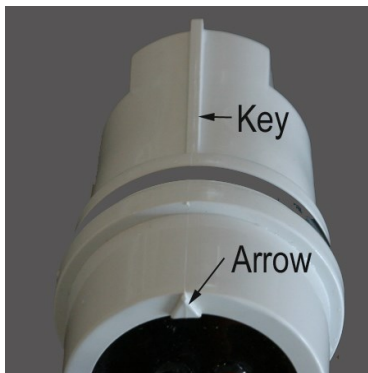



Electrical Installation—001 suffix sensors

1. Two conductors are required to connect the flow sensor to the monitor or control device.
2. The **RED** lead from the sensor is the **+ (Positive)** lead and the **BLACK** lead from the sensor is the **- (Negative)** lead. Observe polarity when extending these conductors and connect them to the **+** and **-** leads or terminals of the FLOW SENSOR INPUT of the monitor or controller. **Do not connect flow sensor to Power or Valve circuits!**
3. Use a shielded Direct Burial cable with at least one twisted pair of conductors. Multiple pair cable may be used. Use #20 AWG or larger solid copper wire conductors to extend the distance up to 2,000 feet.
4. Waterproof the splices. The preferred method is the two part epoxy kit, Scotchlok 3570 as manufactured by 3M. Follow all manufacturer's instructions.
5. Make sure that the flow sensor housing is installed in the tee or the retaining nut is on the wire leads before making the splices.
6. Provide a service loop in the cable to allow the flow sensor housing to be removed from the tee and brought above grade for servicing.
7. Avoid making splices in the direct burial cable.

Calibration Constants

To program the monitor to read flow rate in GPM (gallons per minute)

Model FSI-B15-001 (Standard calibration sensor) - Open controller FLOW set-up screen and find flow sensor "OTHER". Then, when prompted enter the following:

FSI-B15-001 **K = 0.762** and **Offset = 0.126**

Operation

1. Make sure the flow sensor is assembled and the retaining nut is tightened (hand tight) before pressurizing system.
2. Fill pipeline and eliminate trapped air.
3. Flow sensor should begin transmitting flow immediately, however most monitors and control devices have a flow averaging routine that requires several seconds before the device begins to display flow.
4. Always wait for flow to stabilize before setting control limits. Stabilization may take several minutes in large piping systems.



Warranty

Creative Sensor Technology, Inc. (The “Seller”) of 125 Paradise Lane, Rochester, MA 02770 warrants to the Original Purchaser (The “Purchaser”) of its products supplied hereunder to be free from significant defects in material and workmanship under normal use and service for a period of 18 months from the date of shipment by the Seller or 12 months from the date of installation by the Purchaser, whichever period shall be shorter (“the Warranty Period”), unless otherwise agreed in writing or provided for in a written product-specific warranty.

This warranty does not apply to products that are the subject of negligence, accident, or damage by circumstances beyond Seller’s control, or any improper operation, maintenance, storage, installation or use. This warranty also does not apply to accessory items that were not manufactured by Seller, all of which are sold “as is” and without warranty by Seller. This warranty does not cover limited life components such as bearings, shafts or impellers where wear rate is a function of application and environment.

If the Purchaser wishes to make a claim hereunder, he shall send written notice to Seller of any defect within the warranty period. A failure to provide such notice constitutes a waiver of the remedies specified herein. If Seller receives timely notification and if the products are proved to Seller’s satisfaction to have a warranted defect, Seller will, at its own discretion, expense and within a reasonable period of time, either (1) repair, correct or cure the warranted defect(s), or (2) replace the defective product, or (3) give the Purchaser a refund of the price it paid for the product, prorated where appropriate to adjust for the value of any product accepted and retained by the Purchaser.

These remedies shall be the Purchaser’s exclusive remedies (and the sole and exclusive liability of the Seller) for any defects or deficiencies relating to or arising out of product sold by the Seller. The foregoing limited warranty is exclusive and is in lieu of all other warranties, expressed, implied or arising by law, custom or conduct, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, which are expressly disclaimed.